




DIRECT+
Conditioning System



ENVOY

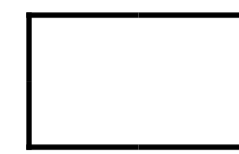

AUTHORITY22

Select Machine

Pattern Information

Date:
 Pattern Type:
 Pattern Difficulty:
 Pattern Designer:
 Pattern Volume (ml): 18,06

Surface Information

Surface Type:
 Surface Brand:
 Age:

Pattern Parameters

Pattern Number:
 Pattern Name: 2014 short 33
 Mode: Clean & Oil
 Forward Speed: Max Clean
 Start Cleaner Spray: 0
 Start Squeegee: 0
 Start Oiling: 6
 Split Pattern: No

Supplies Information


Lane Cleaner: Judge
 Cleaner Mixture Ratio: 8 : 1
 Cleaner Transition Distance: 45 Authority22
 Cleaner Spray End Distance: Envoy
 Lane Conditioner: A22W22

Notes Celiņu kondicionēšanas programma 17. LMSC

Īsā programma

Zone	1	2	3	4	5	6	7	8
Zone End Distance	9	17	23	28	33	0		
Zone Ratio	L 1,6 : 1	1,7 : 1	1,6 : 1	1,5 : 1	: 1	: 1	: 1	: 1
	R 1,6 : 1	1,7 : 1	1,8 : 1	1,7 : 1	: 1	: 1	: 1	: 1
Zone Volume	8,58	5,24	2,77	1,46	0,00	0,00	0,00	0,00

ZONE	7 Pin Side																	Board Number																	10 Pin Side									
	L1	L2	L3	L4	L5	L6	L7	L8	L9	L10	L11	L12	L13	L14	L15	L16	L17	L18	L19	C20	R19	R18	R17	R16	R15	R14	R13	R12	R11	R10	R9	R8	R7	R6	R5	R4	R3	R2	R1					
1	20	24	27	35	45	50	55	60	65	72	72	72	72	72	72	72	72	72	72	72	72	72	72	72	72	72	72	72	65	60	55	50	45	35	27	24	20							
2	10	14	16	22	30	35	40	44	46	50	50	50	50	50	50	50	50	50	50	50	50	50	50	50	50	50	50	50	46	44	40	35	30	22	16	14	10							
3	7	8	12	16	22	28	30	35	35	35	35	35	35	35	35	35	35	35	35	35	35	35	35	35	35	35	35	35	35	35	30	28	22	20	14	10	8	6						
4	5	6	7	10	15	17	20	22	22	22	22	22	22	22	22	22	22	22	22	22	22	22	22	22	22	22	22	22	22	22	22	20	15	13	9	5	4	3						
5	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0	0						
6																																												
7																																												
8																																												

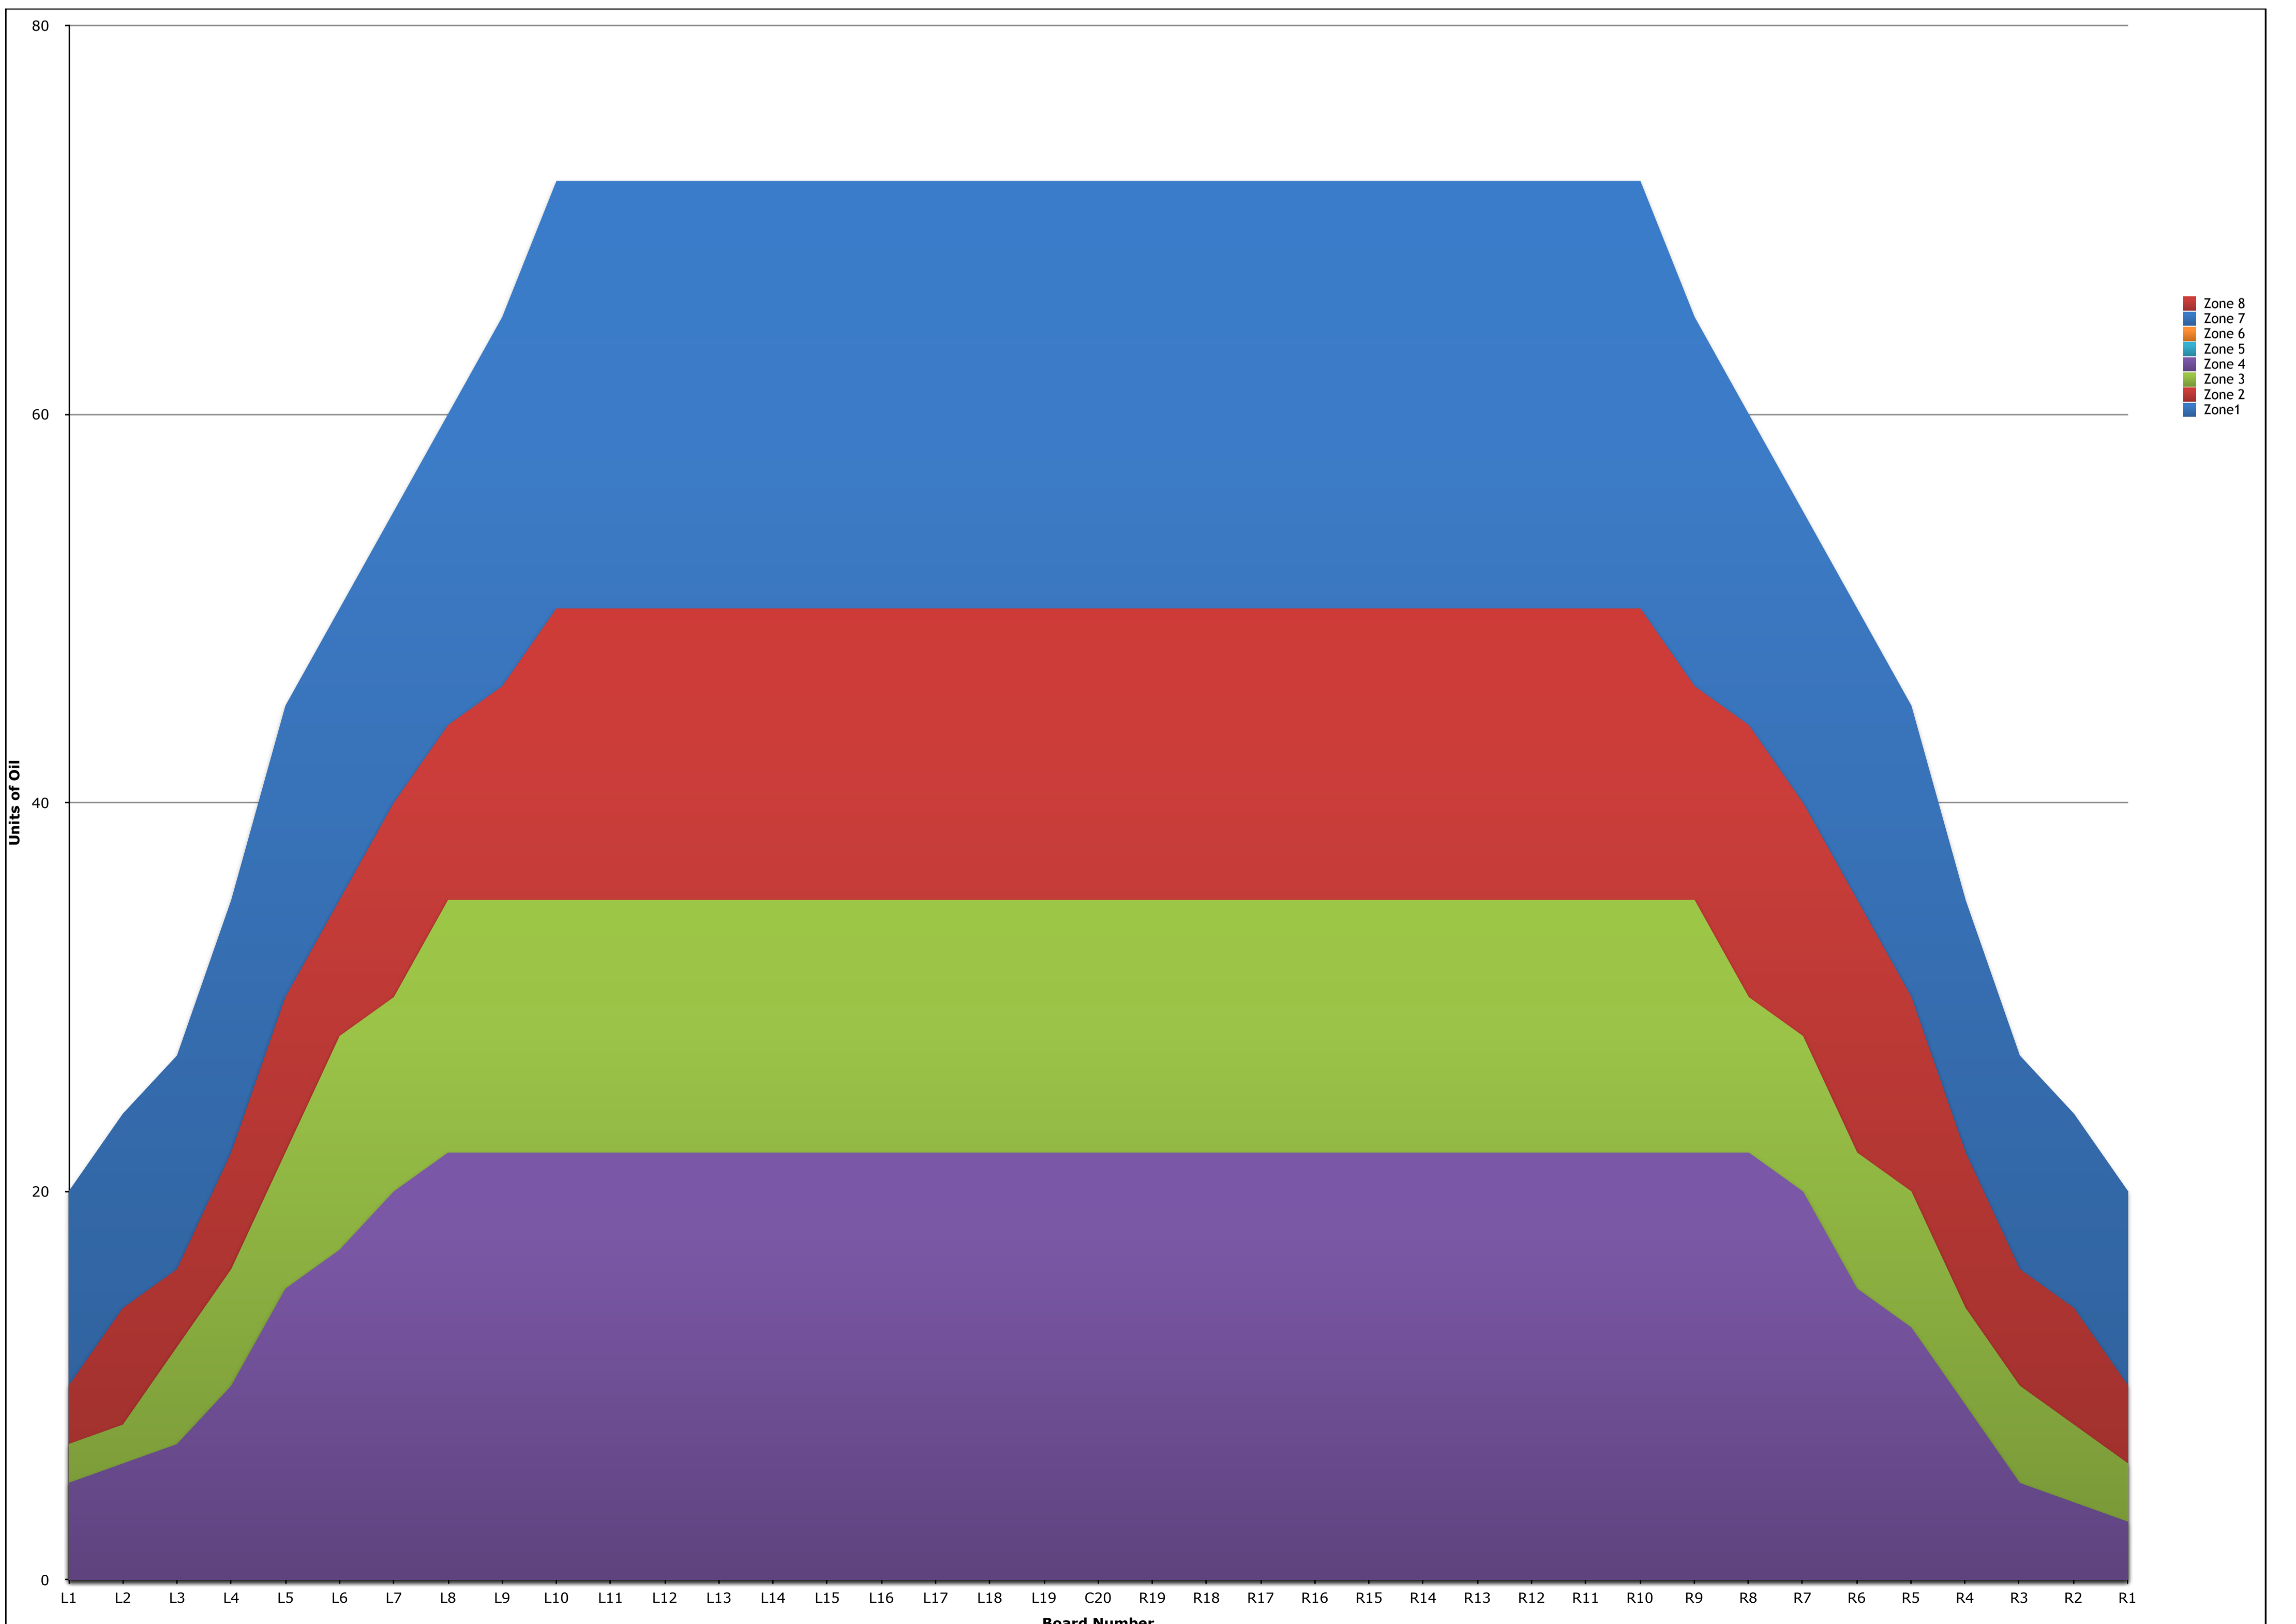



ENVOY AUTHORITY 22

2014 short 33

Crosswise Ratios

	Zone 1	Average	Ratio
3L-7L	Left =	42,4	1,6
3R-7R	Right=	42,4	1,6
18L-18R	Center =	72,0	

	Zone 2	Average	Ratio
3L-7L	Left =	28,6	1,7
3R-7R	Right=	28,6	1,7
18L-18R	Center=	50,0	

	Zone 3	Average	Ratio
3L-7L	Left =	21,6	1,6
3R-7R	Right=	18,8	1,8
18L-18R	Center=	35,0	

	Zone 4	Average	Ratio
3L-7L	Left =	13,8	1,5
3R-7R	Right=	12,4	1,7
18L-18R	Center =	22,0	

	Zone 5	Average	Ratio
3L-7L	Left =	0,0	
3R-7R	Right=	0,0	
18L-18R	Center=	0,0	

	Zone 6	Average	Ratio
3L-7L	Left =		
3R-7R	Right=		
18L-18R	Center=		

	Zone 7	Average	Ratio
3L-7L	Left =		
3R-7R	Right=		
18L-18R	Center =		

	Zone 8	Average	Ratio
3L-7L	Left =		
3R-7R	Right=		
18L-18R	Center=		

The crosswise ratios are calculated by the average units of oil for boards 18L - 18R and divided by the average units of oil for board 3 - 7 left and right.

Lengthwise Ratio By Area

	3L-7L	18L-18R	3R-7R
	Left	Center	Right
Zone 2	1,4	1,4	1,4
Zone 3	1,9	2,0	2,2
Zone 4	3,0	3,2	3,4
Zone 5			
Zone 6			
Zone 7			
Zone 8			



2014 short 33

Lengthwise Ratio By Board

Zone	7 Pin Side										Board Number										10 Pin Side																		
	L1	L2	L3	L4	L5	L6	L7	L8	L9	L10	L11	L12	L13	L14	L15	L16	L17	L18	L19	C20	R19	R18	R17	R16	R15	R14	R13	R12	R11	R10	R9	R8	R7	R6	R5	R4	R3	R2	R1
2	2,0	1,7	1,7	1,6	1,5	1,4	1,4	1,4	1,4	1,4	1,4	1,4	1,4	1,4	1,4	1,4	1,4	1,4	1,4	1,4	1,4	1,4	1,4	1,4	1,4	1,4	1,4	1,4	1,4	1,4	1,4	1,4	1,4	1,5	1,6	1,7	1,7	2,0	
3	2,9	3,0	2,3	2,2	2,0	1,8	1,8	1,7	1,9	2,1	2,1	2,1	2,1	2,1	2,1	2,1	2,1	2,1	2,1	2,1	2,1	2,1	2,1	2,1	2,1	2,1	2,1	2,1	2,1	1,9	2,0	2,0	2,3	2,3	2,5	2,7	3,0	3,3	
4	4,0	4,0	3,9	3,5	3,0	2,9	2,8	2,7	3,0	3,3	3,3	3,3	3,3	3,3	3,3	3,3	3,3	3,3	3,3	3,3	3,3	3,3	3,3	3,3	3,3	3,3	3,3	3,3	3,3	3,0	2,7	2,8	3,3	3,5	3,9	5,4	6,0	6,7	
5																																							
6																																							
7																																							
8																																							

The lengthwise ratios are calculated from the volumes in the first zone.